

Installation Instructions

FULL WALL FACED TOILET SUITE

Model: 8202/8203

Installation of Toilet Seat and Cleaning

It is recommended that toilet seat and cover be installed after all trades are finished

Note:

All measurements for roughing-in should be taken from finished wall/floor.

It is strongly recommended by the manufacturer that installation is carried out by a licensed plumber.

Cleaning Recommendations

The high quality vitreous china finish on all sanitary ware can be maintained by simply using mild soapy water and wiping over.

Sanitary ware should not be cleaned with abrasive materials e.g. steel wool/scourers. Do not use any corrosive or abrasive cleaning agents containing acids or scouring agents as this may lead to surface damage.


Bleaches can also discolour seats and hinges and therefore should not be used.

If your toilet has metal hinges they should only be cleaned with a mild liquid domestic cleaner, with soft soapsuds or Steel & Chrome cleaner


After cleaning, rinse with clean water and polish with a clean soft cloth.

INSTALLATION INFORMATION


S-Trap

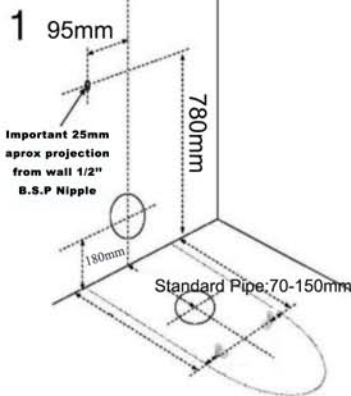

1. Rough in position of water inlet, waste outlet and floor fixing bracket holes. Ensure inlet connection extends 60mm from finished wall. Drill holes for floor fixing bracket then fix brackets to floor.

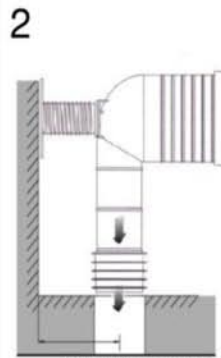


2. Lubricate the fins of the pan bend and position into waste pipe.

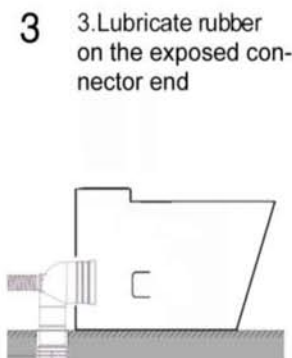


Pipe A (Standard): 70-150mm
Pipe B: 100-190mm
Pipe C: 150-250mm


P Trap

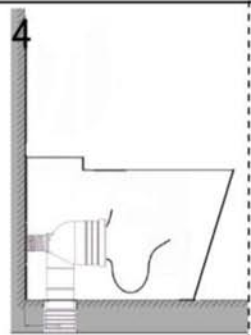


4. Align and push fully assembled toilet back to the wall

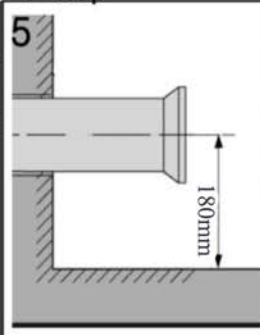


5. Set up waste pipe

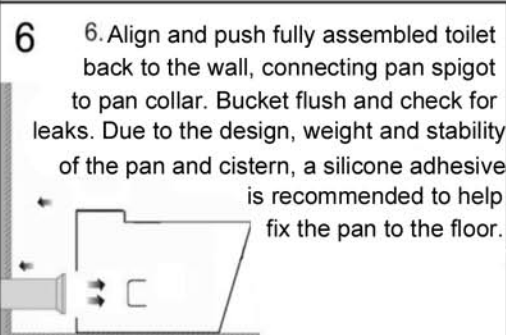


7. Place rubber seal into pan recess (**DO NOT USE SEALANT**). Place cistern screws into holes on the inside of cistern, making sure washers are located correctly. Gently lower cistern onto pan locating fixing screws into matching pan screw holes. Secure cistern to pan. Before tightened fully make sure cistern sits square and straight to pan.

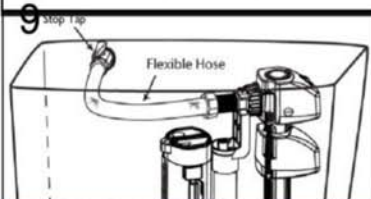

9. IF STEP 8 IS COMPLETED, SKIP THIS STEP. Fit off stop tap then connect rear water inlet valve to stop tap. Fill cistern and ensure correct water level.

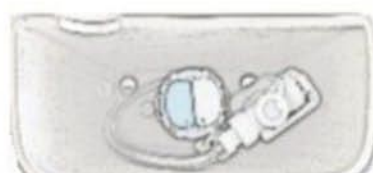

Make sure the inlet valve is not jammed on the side of the cistern wall. This would cause the inlet valve to continue filling when not required.

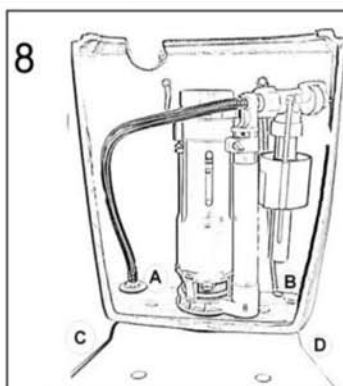

8. IF BACK INLET, SKIP THIS STEP. Remove cap from cistern plug A or B at base cistern. Connect flexible hose to cistern plug A or B depending on location of stop tap. Complete stop tap connection to underside of cistern plug C or D. Fill cistern and ensure correct water level.

Note: Inlet valve can be adjusted if required.